


AUTOCLEAR CheckGate® 9800

MultiZone Metal Detector Portal

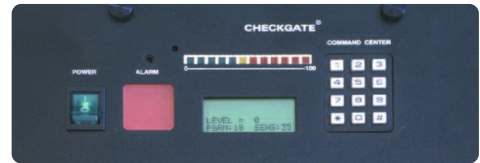

CheckGate®: Easier to view and operate. Large, color-coded LED's and 64-character backlit LCD.

Features and Benefits

- ➔ **8 True horizontal zones for accurate, automatic threat location**
- ➔ **8 zone and 100 sensitivity settings provide ultimate location and sensitivity**
- ➔ **Computer optimized antennas, designed and built in the USA**
- ➔ **True digital signal processing (DSP) with advanced electronics for greatest reliability and immunity from surrounding electronic interference**
- ➔ **100 fully adjustable program settings to customize threat level conditions**
- ➔ **Harmless to health, film, tapes, discs, electronic media**
- ➔ **Exceptional discrimination of the smallest, thinnest weapons**

70 years leading innovation in checkpoint detection & support

AUTOCLEAR

autoclearus.com

**Airports • Courts • Correctional • Power Plants
Government • Police • Schools • Embassies
Events • Hotels • Banks • Rentals • Media**

Scintrex® • CheckGate® • Dynavision® • Control Screening® • Federal Labs®
U.S. Canada France UK UAE Japan Latin America Singapore Spain

CheckGate® 9800 technical specifications

The CheckGate® 9800 simplifies the detection and location of metal weapons, explosives parts and threats. With its unique design, the 9800 uniquely employs eight separate horizontal zones. The vertical zone L.E.D. lightbar visually indicates where on the person the likely metal targets are concealed among the eight horizontal zones. Individual zone adjustments reduce false alarms on personal items like keychains, coins, buckles, shoe shanks and large jewelry. Powerful software optimizes detection and reliability. With extremely low false alarm rates, the 9800 (a.k.a. MZ-8) maximizes traffic flow.

ELECTRONICS

Advanced high-speed digital signal processor "brain" with non-volatile, non-erasable memory, LCD display, large LED bargraph meter, with selectable vertical LED zone indicators and audio/visual alarm.

ARCHWAY

Robust, seamless architectural plastic housing secures the multi-field antennas and vertical zone detection and traffic control LED lighting.

- Standard Composite: Blue-grey Granite
- Custom formica housing colors available.

POWER

90 – 265 VAC (<1 Amp)
50 – 60 Hz ± 3 Hz

ENVIRONMENTAL CONDITIONS

Temperature: -10C° to 55C°
Humidity: 0–98%, non-condensing

DIMENSIONS/WEIGHT (Standard Configuration)

Overall Loop Housing: 87"H x 24"D x 35"W
Passage Clearance: 79.5"H x 28"W
Weight: Less than 140 lbs. (64 kg)

PERFORMANCE STANDARDS

Performs to the TSA enhanced metal detection target standards. Meets and exceeds NIJ standard 0601.00 level 1-5, ICAO, FCC and F.A.A. Airport Safety Regulations. Independently certified safe for pacemakers and defibrillators.

STANDARD FEATURES

- Individual zone sensitivity adjustment ranges from 0 – 99 from default baseline setting for all 8 zones.
- Metal interaction effects among ferrous and non-ferrous metals are minimized through both antenna and software design.
- DSP (Digital Signal Processing) circuitry eliminates spikes, noise, and two-way radio interference.
- Bright, large LED indicators for power and 8-zone vertical alarm status column.
- Reliability of 70 years of American metal detector portal detection systems design, make, test and service.
- Synchronizes among multiple units with 4 selectable audio tones.
- Person counter.

WARRANTY One year factory warranty standard. Longer warranties available. Lifetime warranty on housing.

CONTROL CONSOLE LCD DISPLAY

Easy to use. The password is entered using the console-mounted keypad, enabling any proper adjustment to operating settings. Self-prompting instructions are provided for all selections. With its user friendly menus, CheckGate® 9800 is the industry's easiest unit to operate or set-up, with the greatest immunity to interferences.

OPTIONS

- Remote Command Center
- 24" and Custom Widths
- Formica Color, Construction
- Floor Anchor Kit
- Wheels or No Tools Hardware
- Battery Backup
- Matching Key Side Table (37cm W x 59cm D x 96cm H)
- Weatherization
- Built-in Power Conditioner
- Second Vertical Alarm Bar

New, matching Key Table and award winning HandWand® available



www.autoclearus.com

World Headquarters Plant

2 Gardner Road
Fairfield, NJ 07004-2206 USA
Tel: + 1 (973) 276-6161
Fax: + 1 (973) 276-6162
leads@autoclearus.com

Central EU

eu@autoclearus.com
Tel: + 33 2 38 61 97 00
Fax: + 33 2 38 61 97 01

Southern EU

seu@autoclearus.com
Tel/Fax: + 34 91 650 89 86

Northern EU

neu@autoclearus.com

Canada & Scintrex

info@scintrextrace.com
300 Parkdale Ave., Ottawa
Ontario, Canada K1Y 1G2
Tel: + 1 (613) 224-1061
Fax: + 1 (613) 224-2603

Asia Southeast & North

sasia@autoclearus.com
nasia@autoclearus.com

Latin America

latina@autoclearus.com
Dom. Republic

Middle East

ME@autoclearus.com
Dubai, UAE
Tel: + 971 6 557 4505
Fax: + 971 6 557 4507

Western U.S.

nw@autoclearus.com
sw@autoclearus.com

Distributor:

ISO 9001-2000 Certified

www.autoclearus.com
www.tracedetection.com www.fed-labs.com

70 years of leadership in advanced checkpoint detection and support

AUTOCLEAR
autoclearus.com

Scintrex® • CheckGate® • Dynavision® • Control Screening® • Federal Labs®
U.S. Canada France UK UAE Japan Latin America Singapore Spain